

1

2

3

4

5


6

7

8





Schritt / step 1 u. 8

DETAIL E
MAßSTAB 1 : 1

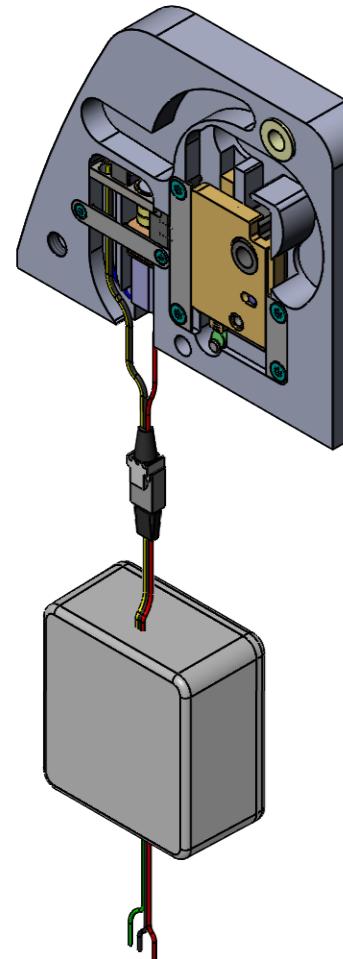


- 1: Gasdruckfedern von der Seitenwand lösen.
Die rechte Seite zuerst
- 2: Adapter öffnen und Lagerbock abschrauben
- 3: Adapter schließen und Antriebeinheit wie abgebildet öffnen.
- 4: Antriebeinheit links mit Lagerbock anheben und nach links abnehmen.
- 5: Vorgefrästen Ausschnitt ausbrechen.
- 6: Antriebeinheit mit zwei Stufenlagerbock wieder einsetzen und schließen.
- 7: Adapter öffnen und Lagerbock anschrauben.
- 8: Gasdruckfedern wieder einhängen.
Links zuerst


- 1: Detach the right-hand side gas pressure spring from the side of the housing and then the left.
- 2: Open the fixture and unscrew the bearing bracket.
- 3: Close fixture and open drive unit as shown.
- 4: Lift up the drive unit on the left using the bearing bracket and remove from the left.
- 5: Remove the pre-milled cut-out section
- 6: Reinsert the drive unit with the two-stage bearing block and close.
- 7: Open the fixture and screw on the bearing block.
- 8: Re-install the left-hand gas pressure spring and then the right.

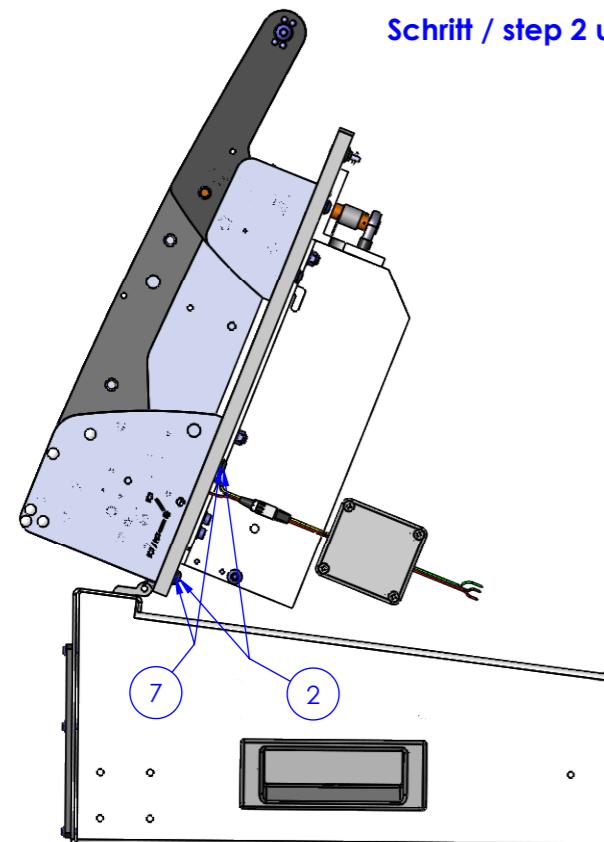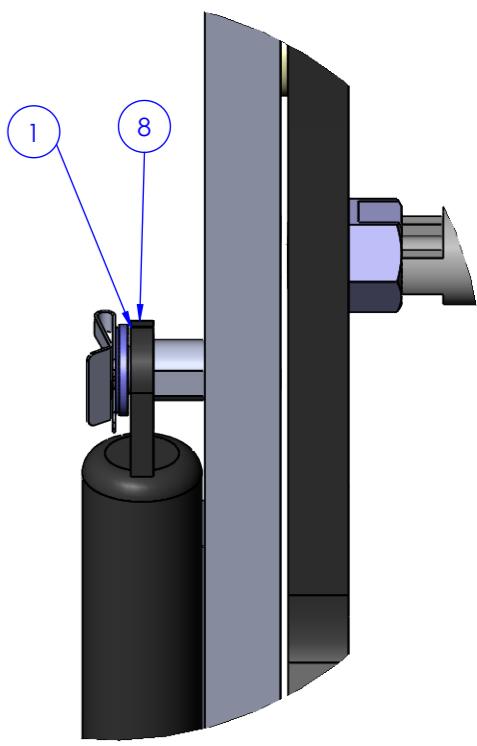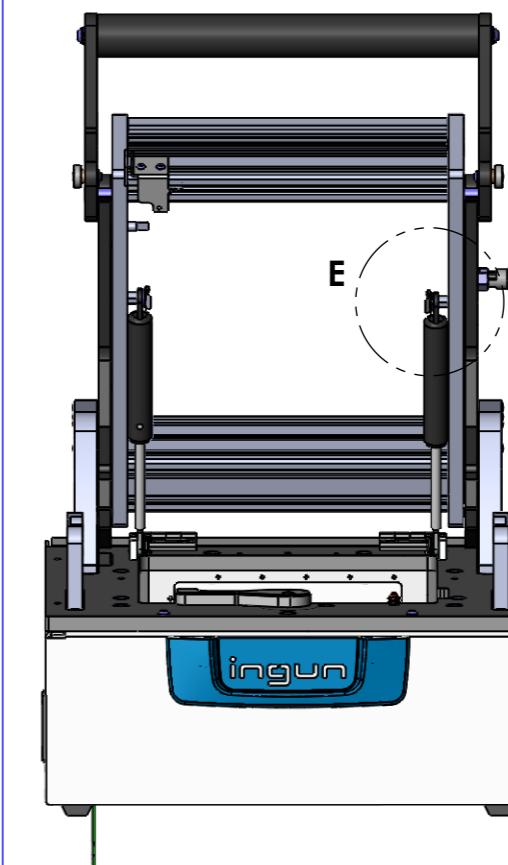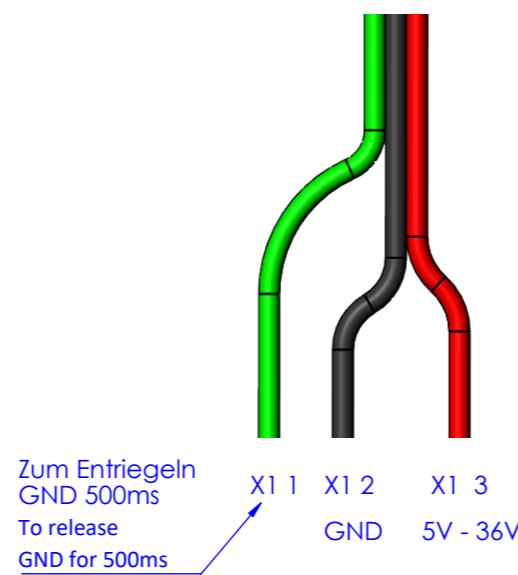


Schritt / step 2 u. 7

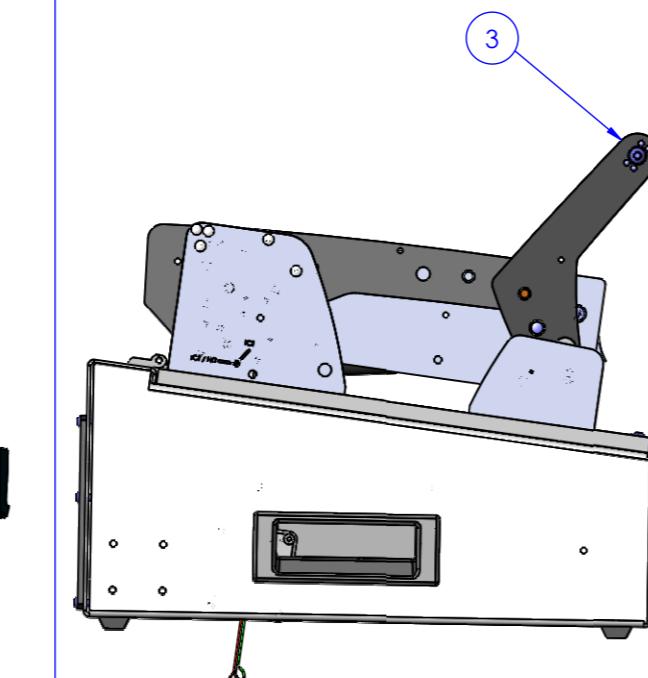

Schritt / step 3

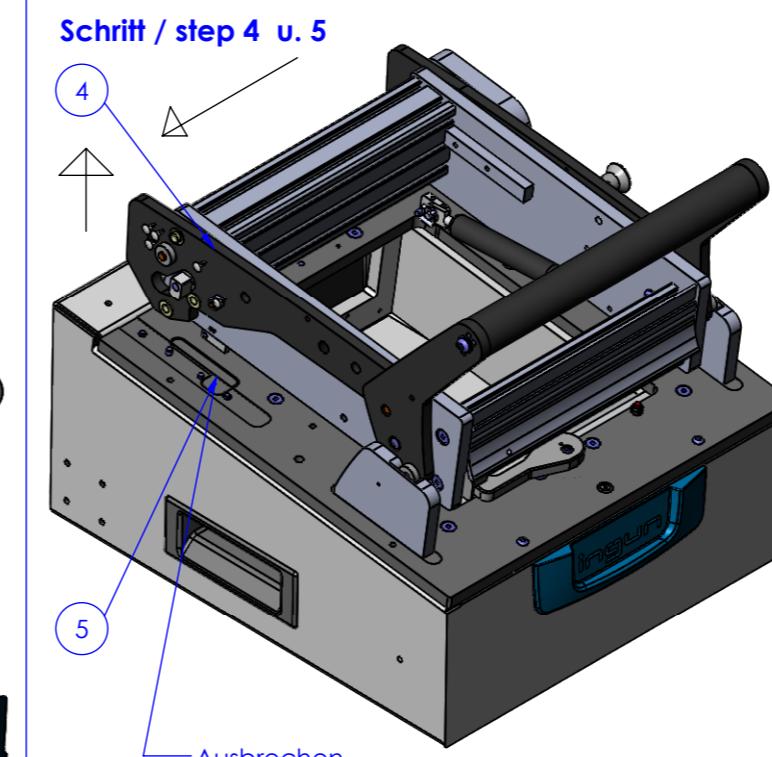

Ausbrechen
Remove

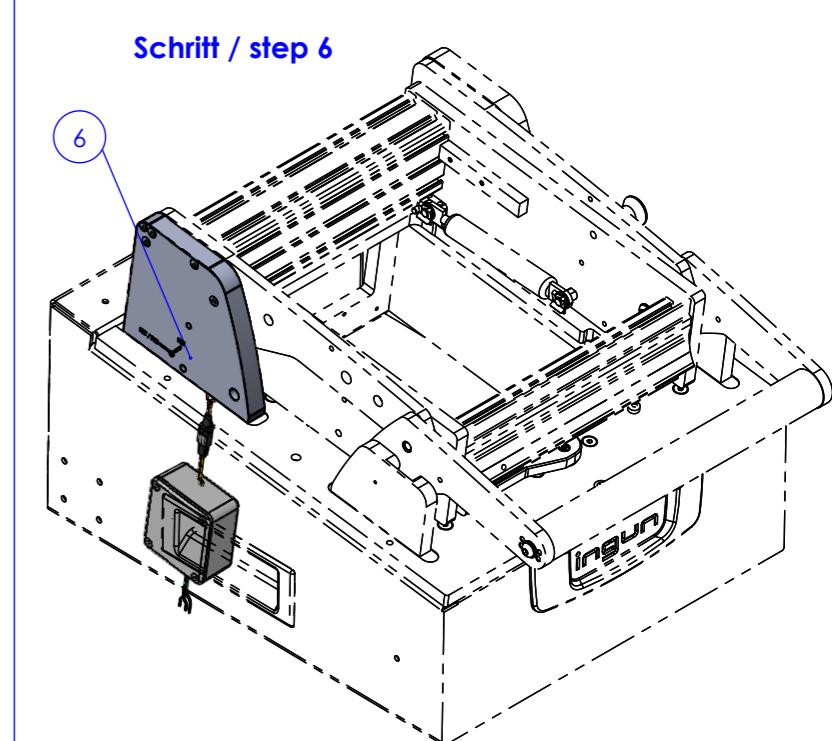

Schritt / step 6