

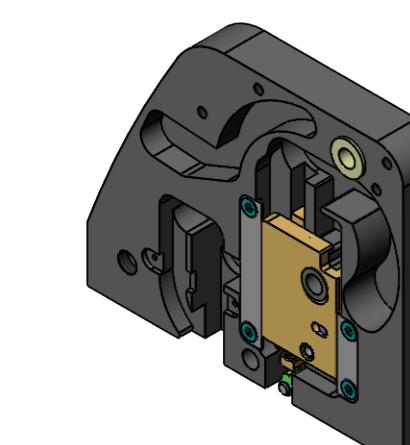


- A
1: Gasdruckfedern von der Seitenwand lösen.
Die rechte Seite zuerst
2: Adapter öffnen und Lagerbock abschrauben
3: Adapter schließen und Antriebeinheit wie abgebildet öffnen.
4: Antriebeinheit links mit Lagerbock anheben und nach links abnehmen.
5: Vorgefrästen Ausschnitt ausbrechen.
6: Antiebseinheit mit zwei Stufenlagerbock wieder einsetzen und schließen.
7: Adapter öffnen und Lagerbock anschrauben.
8: Gasdruckfedern wieder einhängen.
Links zuerst


- B
1: Detach the right-hand side gas pressure spring from the side of the housing and then the left.
2: Open the fixture and unscrew the bearing bracket.
3: Close fixture and open drive unit as shown.
4: Lift up the drive unit on the left using the bearing bracket and remove from the left.
5: Remove the pre-milled cut-out section
6: Reinsert the drive unit with the two-stage bearing block and close.
7: Open the fixture and screw on the bearing block.
8: Re-install the left-hand gas pressure spring and then the right.

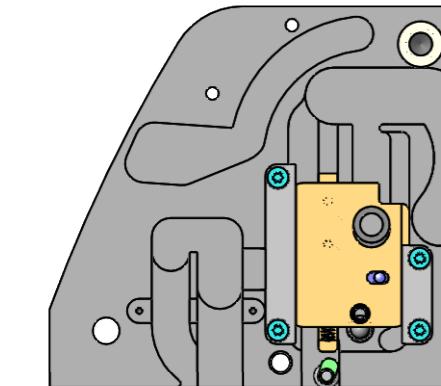


Schritt / step 1 u. 8

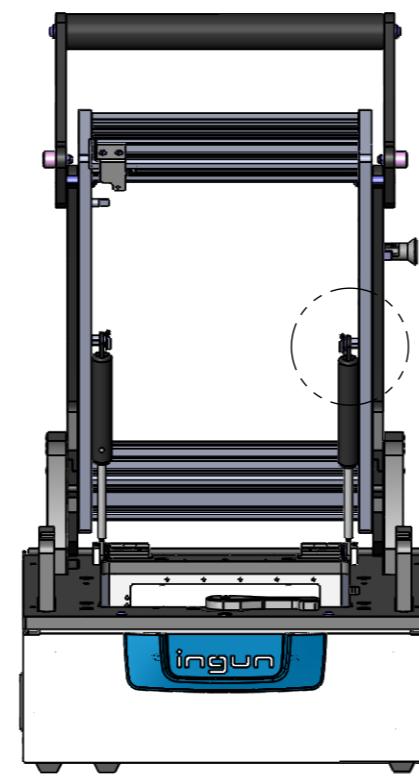


DETAIL F
MAßSTAB 1 : 1

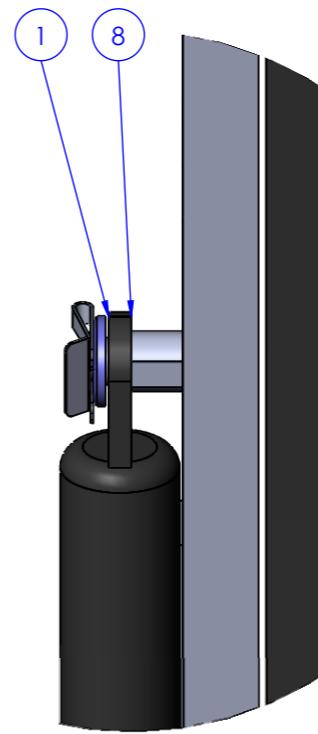


Schritt / step 2 u. 7

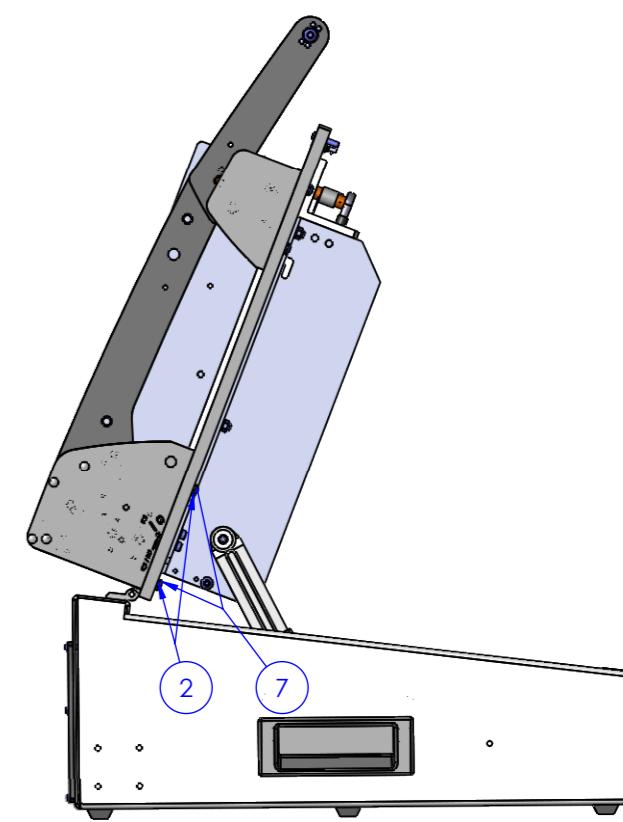


Schritt / step 3

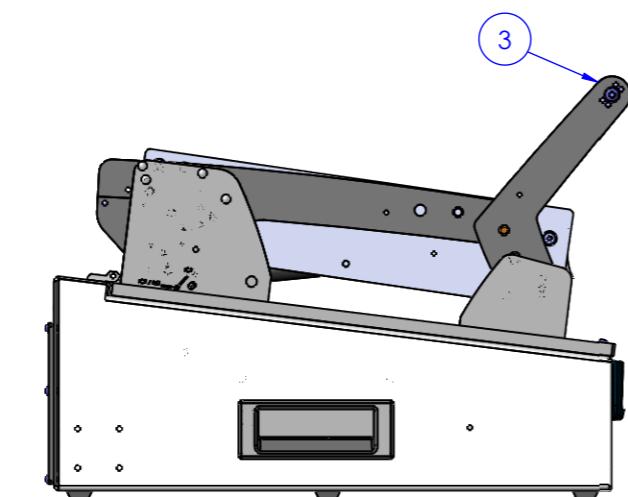

Schritt / step 4 u. 5

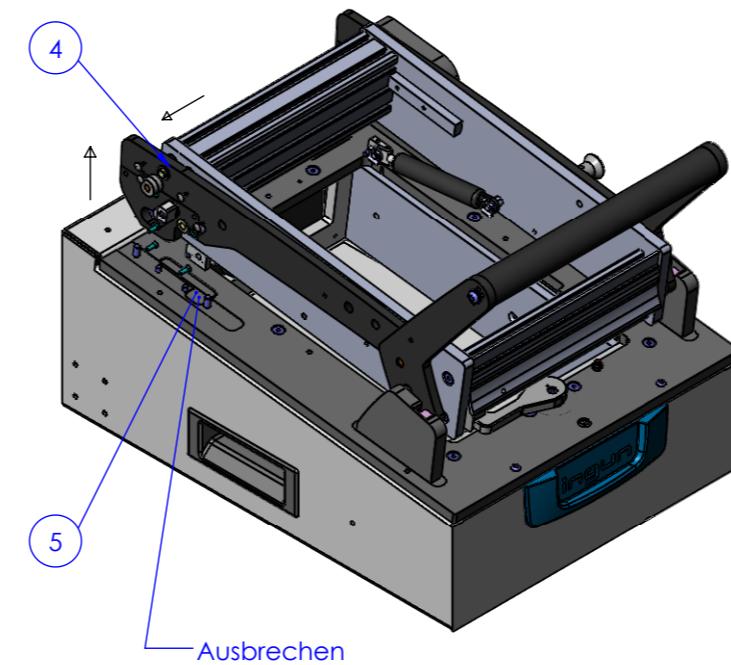

Schritt / step 6

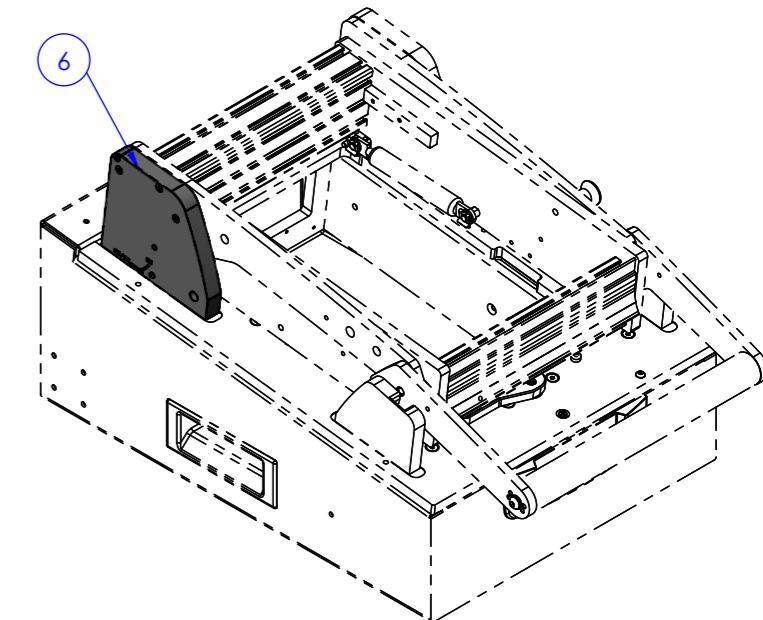

RoHS-3;6c